



**INSTRUCTIONS FOR INSTALLATION:**


- ◇ ~~2COOL~~ fit perfectly in the groove of the stock side panel.
- ◇ Hold ~~2COOL~~ up to the outside of the stock panel on the sled and mark holes.
- ◇ Drill holes in the marked places on the stock panel.

◇ It is suggested that you **leave the horseshoe shaped clutch protection** that is built into the stock panel. Do not cut out that area.



Notice where the clutch has hit, it is better not to cut anything out here!

◇ Use a holesaw bit (1 1/2" to 2" recommended) and drill holes in a pattern in the area between the marked rivet holes on your stock panel (see example in photo). It is up to you to determine amount of airflow needed for your particular application. If you choose to cut out the entire panel behind the vent, realize that the strength of your panel may be compromised and the vent may not fit as it was intended.

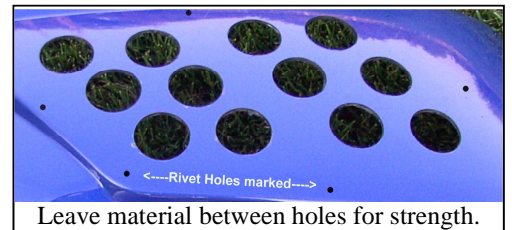

Leave material between holes for strength.

◇ Use included rivets to attach new ~~2COOL~~ to your stock panel.

◇ Enjoy your "2COOL" sled!

Thank you for your Business!

Tammy or Alan Schoen  
1-208-587-8584 or 1-208-590-1786

schoen311@roadrunner.com  
www.2coolairvents.com

NOTE: If you get a puncture or tear in your panel, contact us and we can replace the fabric at a nominal cost as long as the frame is in good shape.